

μ400P, μ500PT, μ600P & μ700PT - Pass code Protection Guide (a)

	Value	Meaning
Pass	0	Pass code OFF
	1 to 99,999	Available pass codes
	Value	Meaning
Level	0	ONLY setpoints SP.A1 and SP.A2 may be changed WITHOUT entering the pass code.
	1	No changes may be made WITHOUT entering the pass code.

Making Adjustments Once A Pass Code Has Been Set:

Once the correct pass code has been re-entered, the instrument will allow you to scroll through all parameters ONCE to make alterations. You will need to re-enter your pass code for each subsequent attempt at programming.

Procedure to **TURN ON** the **PASS CODE**:

- 1) Scroll through menu using  until you reach **PASS** - Select your new code by pressing  or . Press  to save.
- 2) Scroll through menu using  until you reach **Level** - Select **0** or **1** by pressing  or . Press  to save.

Procedure to **CHANGE** the **LEVEL** setting:

- 3) Scroll through menu using  until you reach **PASS** - Select your existing code by pressing  or . Press  to save.
- 4) Scroll through menu using  until you reach **Level** - Select **0** or **1** by pressing  or . Press  to save.

Procedure to **TURN OFF** the **PASS CODE**:

- 5) Scroll through menu using  until you reach **PASS** - Select your existing code by pressing  or . Press  to save.
- 6) AGAIN, Scroll through menu using  until you reach **PASS** - RESET the code to **0** by pressing  or . Press  to save.

If the Pass code is **forgotten**, you may **reset** this as follows:-

Switch off power to the instrument. Press and hold  whilst power is re-applied. The passcode has been disabled (reset back to **0**). All other settings will be retained.